

# QUICK PROGRAMMING GUIDE

## For the Midland Model WR-100 All Hazard Alert Radio

### PLEASE READ THIS FIRST

These are abbreviated instructions; please refer to the user manual supplied with your radio for detailed questions or additional programming instructions. Before you start programming, please read this entire instruction sheet. You will need to determine the County Codes you want to monitor before you start programming the radio. For county codes, refer to the map on the back or call the National Weather Service at 1-888-697-7263 or visit their web site at [www.nws.noaa.gov/nwr](http://www.nws.noaa.gov/nwr) and click on 'Station Listing and Coverage'.

Make a list of the county codes you want to enter.

Note- While programming, if keys are not pressed within 30 seconds the radio will go out of programming mode, causing you to start at step one of the programming process you were on.

#### **Power the unit:**

1. Insert 3 AA batteries (Highly recommended for two reasons: First, power outages can occur during storms. Second, when a tornado warning is issued, proceed to a basement or interior windowless room. Take your battery operated weather radio with you to keep you informed of the event.)
2. Insert A/C adapter cord and plug into 120 Volt outlet.

#### **Program the time:**

1. Press/release 'MENU' button. "TIME" will be displayed.
2. Press/release 'SELECT' button. Use UP/DOWN arrow buttons to set the hour.
3. Change to minutes with the right arrow button and use the UP/DOWN arrow buttons to set the minutes.

#### **Program the local Weather Radio Frequency:**

1. Press/release 'MENU' button. "TIME" will be displayed.
2. Press/release UP arrow button twice to display "CHANNEL".
3. Press 'SELECT' button. A channel number 1-7 and frequency will be displayed.
4. Press UP/DOWN arrow keys to find the channel you desire. See Table of frequencies, channels, and cities covered by each below.
5. Press "SELECT". Voice Alert icon will be displayed. 
6. Press "MENU" to close menu mode. To turn Weather/Hazard broadcast on again, press "WEATHER/SNOOZE".

#### **Program the county codes you selected:**

1. Press 'MENU' button. "TIME" is displayed.
2. Press UP arrow key three times so "SAME SET" is displayed.
3. Press 'SELECT' button. The display can say "ANY", "SINGLE" or "MULTIPLE".

4. Press UP/DOWN keys to display "SINGLE" if you want to monitor only one county code. Select "MULTIPLE" if you want to monitor more than one county code.
5. Press 'SELECT' button when your correct selection is visible. The display will say "SAME 01". This indicates that you are ready to program the first county code.
6. Press 'SELECT' button again to begin entering your first county code.
7. Use 'UP' or 'DOWN' arrow keys to set the first digit then advance to the other digits in turn with the 'RIGHT' arrow key.
8. Press 'SELECT' to save your county code. If you are in 'SINGLE' mode, "SAME SET" will be displayed. If you are in 'MULTIPLE' mode "SAME 01" will be displayed.
9. If you are programming more than one county code, when "SAME 01" is displayed, press the 'UP' arrow to show "SAME 02".
10. Press 'SELECT' and proceed as in step 7. Continue to program county codes by increasing the "SAME ##" with the 'UP' arrow key.
11. Press "MENU" to close the programming menu.

#### **To verify codes:**

Use the same procedure as programming codes except that you need not change numbers in the codes.

#### **Program alert type (voice, tone, or display):**

1. Press 'MENU' button. "TIME" is displayed.
2. Press 'UP' arrow four times so "ALERT TYPE" is displayed.
3. Press 'SELECT' button. "VOICE", "TONE" or "DISPLAY" will be seen.
4. Press 'UP' arrow to find the type of alert you want.
5. Press 'MENU' button twice to return to radio operation.

Note: The local National Weather Service office sends a test message every Wednesday. Your weather radio should beep and display "WEEKLY TEST" to indicate that it is working properly.

**For further emergency preparedness information in your community, contact your local Emergency Management Agency.**

## What Frequency should I tune to at my location?

<b>Frequency</b>	<b>Channel Number</b>	<b>Cities within Range</b>
162.400	1	Springfield, Branson, Ozark
162.425	2	Joplin, Neosho, Gainesville, Ava
162.450	3	Hermitage
162.475	4	Nevada, El Dorado springs, Stockton Lake, Osceola
162.500	5	Alton
162.525	6	Cassville, Monett
162.550	7	Branson, Kimberling City, Forsyth, Galena

